

USER MANUAL AND WIRING DIAGRAM




There are four actions that will immediately and irreversibly damage your system


- 1) Connecting AC OUT to AC IN
- 2) Connecting 12V OUT to 12V IN
- 3) Connecting anything in reverse polarity
- 4) Expanding battery capacity w. anything other than a Revov 12V 100Ah battery in parallel via the 12V OUT parallel port

Only For Systems Containing Car Charger Functionality

60 to 100A
ANL Fuse

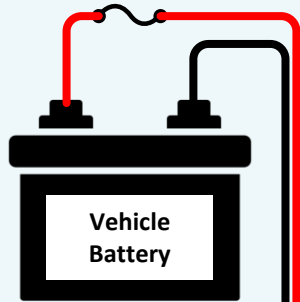


16mm² Cable
(Minimum)

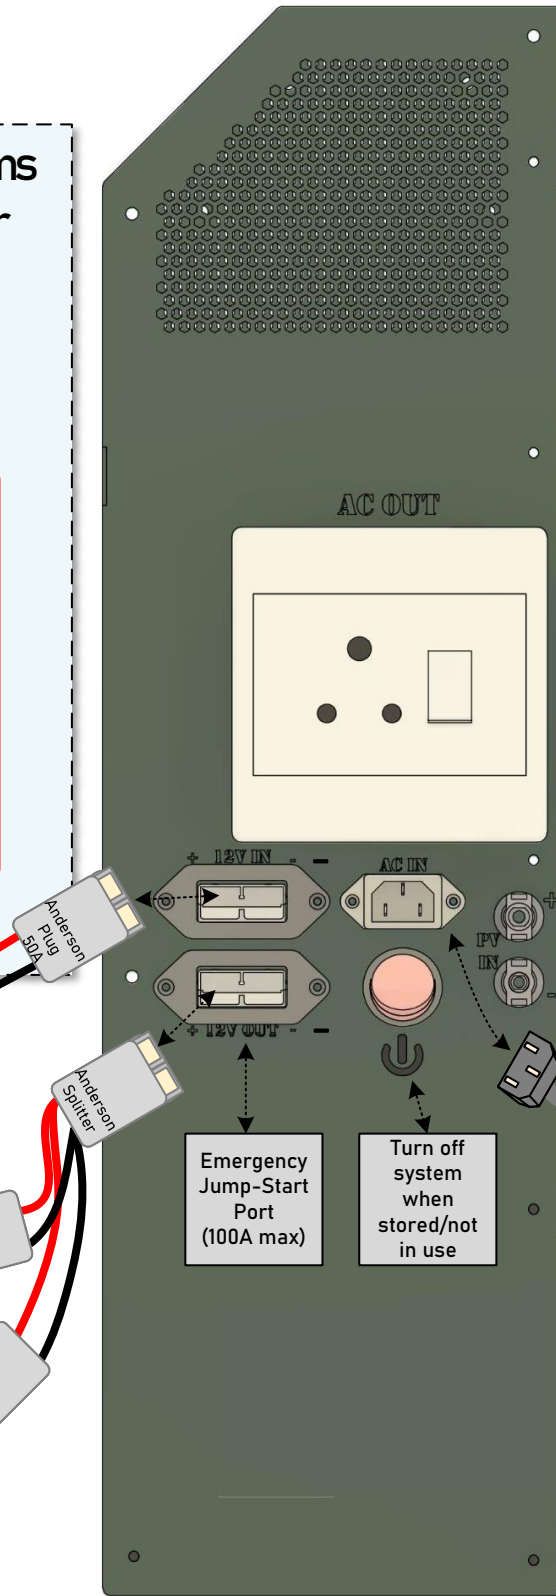


Only For Systems Containing Solar Charging (MPPT)

Solar Panels
Max 100V

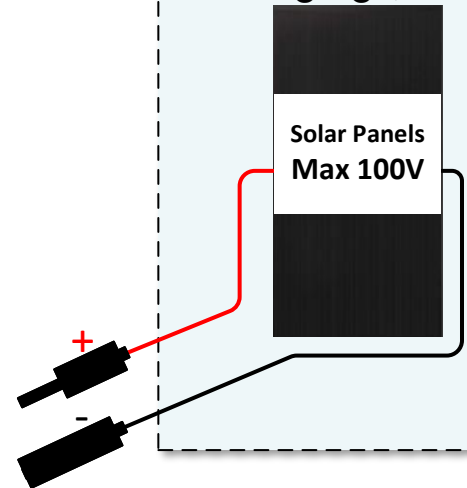

Only For Systems With Charge-From-Grid Functionality

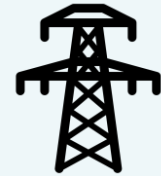

Grid

OR



Generator



+



2nd
Battery for
Extra Capacity



PLEASE NOTE
Connecting anything other than a **Revov 100Ah** will damage your system due to battery imbalance



Battery Bluetooth App
(Enable Location)



MOBIWATT

A DIVISION OF MULTIWATT